


BATTERY DISCONNECT SWITCH

1. Battery disconnect switch is on left side of machine. Open access door.
2. Open access door and turn battery disconnect switch clockwise (to the right) to ON position (1) to activate entire electrical system. Switch must be in ON position to start engine.

CAUTION

**NEVER turn battery disconnect switch to OFF position when engine is running.
Damage to electrical system could result.**

3. Turn battery disconnect switch counterclockwise (to the left) to OFF position (2) to deactivate entire electrical system.
4. When machine will not be used for an extended period of time (1 month or longer), battery disconnect switch should be turned to OFF position (2). This will prevent a short circuit or other electrical system components from draining batteries.

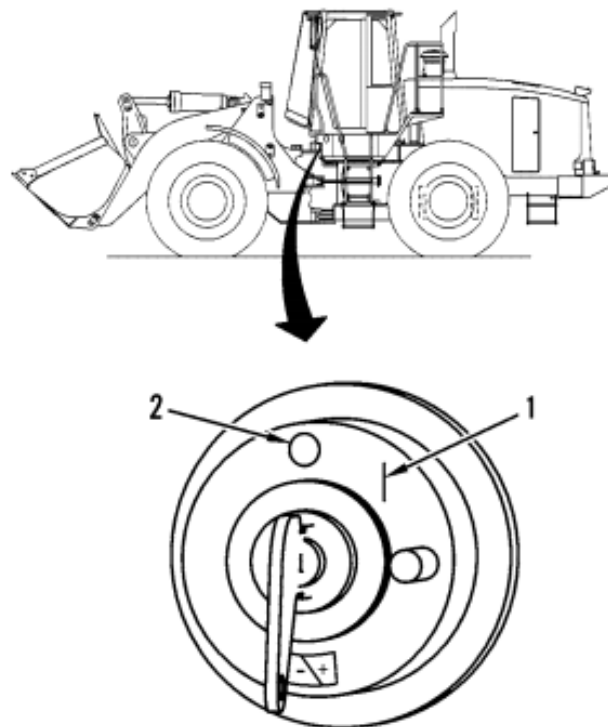

427-C0049